

Original Instruction Manual



P-104 Pull & Tear Gummed Tape Dispenser

Manufacturer: Kingnode (Fujian) Technology Co., Ltd.

Address: No.11 Xiazhai Road, Hua An Economic Development Zone,


Zhangzhou, Fujian, 363000, China. Email: info@kingnodetech.com Website: www.kingnodetech.com Thanks for choosing our P-104 Water-Activated Tape (WAT) Dispenser. We hope it can bring you a satisfactory sealing experience.

Part I Technical Data

Technical Data of P-104 Water-Activated Tape Dispenser:

MODEL	P-104		
Carton Dimension (mm)	360*195*160		
Product Dimension (mm)	300*106*120		
Gross Weight (kg)	1.0		
Net Weight (kg)	0.6		
Tape Width (mm)	≤76		
Diameter Roll (mm)	≤200		
Brushes Piece/Set	2		
Operating Temp Range(°C)	0 °C~+45 °C		
Working Humidity Range(%)	5%-95% (non-condensation)		

Part II Illustration of the WAT Dispenser

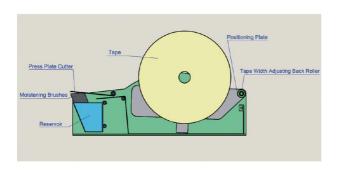

Part III Operating Instructions

The operation of P-104 dispenser is very simple, the specific operation method is as follows:

- 1. Fill up the Reservoir with 4/5 volume of water.
- 2. Loosen the tape roll with its gummed side down, make sure the leading end of the tape forward, and place it into the tape holder, adjust the Tape Width Adjusting Back Roller manually to fit the width of the tape roll.
- 3. Pull the leading end of the tape roll and thread it through the path between the Pressure Blade and the Reservoir. Press on the top of the Pressure Blade, pull the tape to the desired length and tear it up across the blade. The tape is cut and ready for sealing.

Part IV Daily Maintenance

In order to keep the best results, it is recommended that the following daily maintenance should be performed:

- 1. Check the water level frequently, to avoid uneven moistening due to insufficient amount of water.
- 2. Clean the brush and blade with soap water regularly to avoid the accumulation of gum which may affect the wetting effect of the tape.
- 3. Regularly use lubricating oil to lubricate the rotating parts of the equipment, such as the bearings and transmission belts, to avoid inflexible parts causing running stalls or blockages.
- 4. When a paper jam occurs, carefully check and clean the tape path to avoid paper jam or blockage again.

Part V Safety Precautions

- During the storage, transportation and handling of this product, please guard against squeezing, falling and impacting, so as to avoid deformation and damage of equipment parts, which will affect the performance of the product.
- Since the product contains sharp parts such as cutting knife, the product should be placed and used away from children's reach to avoid personal injury.

Part VI After-Sales Service

The warranty period is two year from the date of purchase. We provide the service of repairing and replacing defective parts of the WAT dispenser free of charge during this period.

The expired warranty period and the repair services outside the warranty range are not covered by the warranty. Only the repair cost will be charged under the following situations:

- 1. The damages caused by equipment handling, equipment installation and improper use;
- The damages caused by natural disasters or other force majeure factors when user arranges transportation or using it individually.
- 3. The damages caused by individually dismantling or replacing any internal components of the equipment;
- 4. The equipment is damaged due to the guidance of non-our professional technicians or failure to follow this operation manual;
- Quick-wear parts such as blade, reservoir, brush, etc. are not covered by the warranty.

Catalog of Water-Activated Tape Dispenser Series:

No.	Item No.	Product Name	
1	P-104	Pull & Tear Gummed Tape Dispenser	
2	M-204	Manual Gummed Tape Dispenser	
3	E-304H	Electronic Gummed Tape Dispenser (with heater)	
4	E-304HP	Electronic Gummed Tape Dispenser (with lithium battery and heater)	
5	E-304BHP	Electronic High Speed Gummed Tape Dispenser (with lithium battery and heater)	
6	E-304HL	Electronic Gummed Tape Dispenser (larger size with heater)	
7	E-404H	Electronic Gummed Tape Dispenser (with heater))	
8	E-404HL	Electronic Gummed Tape Dispenser (larger size with heater)	

Appendix: Maintenance Service / Repair Record

Maintenance Service / Repair Record Card

User Information								
Customer Name					Purchase Date			
Model No.				7	Telephone Number			
Email Address					Postal code			
Address								
Dealer Information								
Dealer Name				7	Telephone Number			
Email Address					Postal Code			
F	Address				-55			
Maintenance Records								
S/N	Warranty Reasons		Repair Content		Customer Acceptance	Maintenance Personnel		
1								
2								
3								
4								
5								
6								
7								
8								
9								
10								
11								
12								

Fujian, China - Zhangzhou

Fujian Jialong Adhesive Tape Co.,Ltd.

No.11 Xiazhai Road, Hua An Economic Development Zone, Zhangzhou, Fujian, 363000, China.

Tel: +86-596-728-0001

Fujian, China - Xiamen

Fujian Jialong Adhesive Tape Co.,Ltd. Xiamen Branch Room 2109, Building A, Xinjing Center, Jiahe Rd 21st, Siming District, Xiamen, Fujian, 361007, China. Tel: +86-592-207-5506

Email: info@kingnodetech.com Web: www.kingnodetech.com

Guangdong, China

Fujian Jialong Adhesive Tape Co.,Ltd. Guangdong Office Building D, Gate 1, Shalong Road, Delang Industrial Park, Shatang Community, Houjie Town, Dongguan, Guangdong, 523955. China.



Shanghai Jialong Fiber Tape Co.,Ltd.

Floor 3, Building 1,No.80 Xiangmin Road, Chedun Town, Songjiang District, Shanghai, 201611, China. Tel: +86-21-5108-3676

USA

Kingnode America Inc.

636 Innovation Dr, Winder, GA 30680, USA Email: info@kingnodetech.com Web: www.kingnodetech.com

